

FIGURE 1

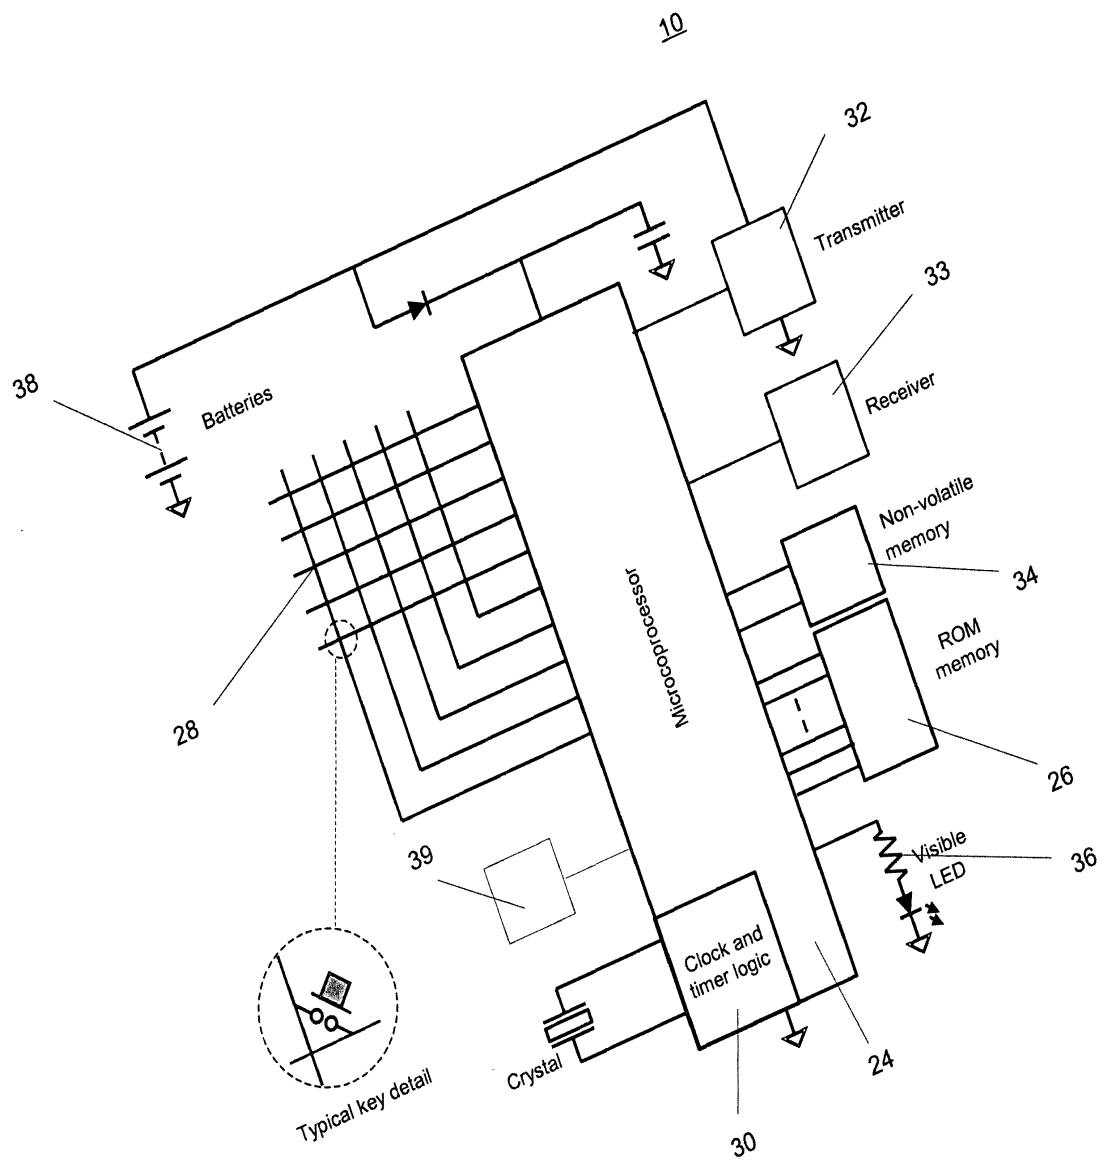


FIGURE 2

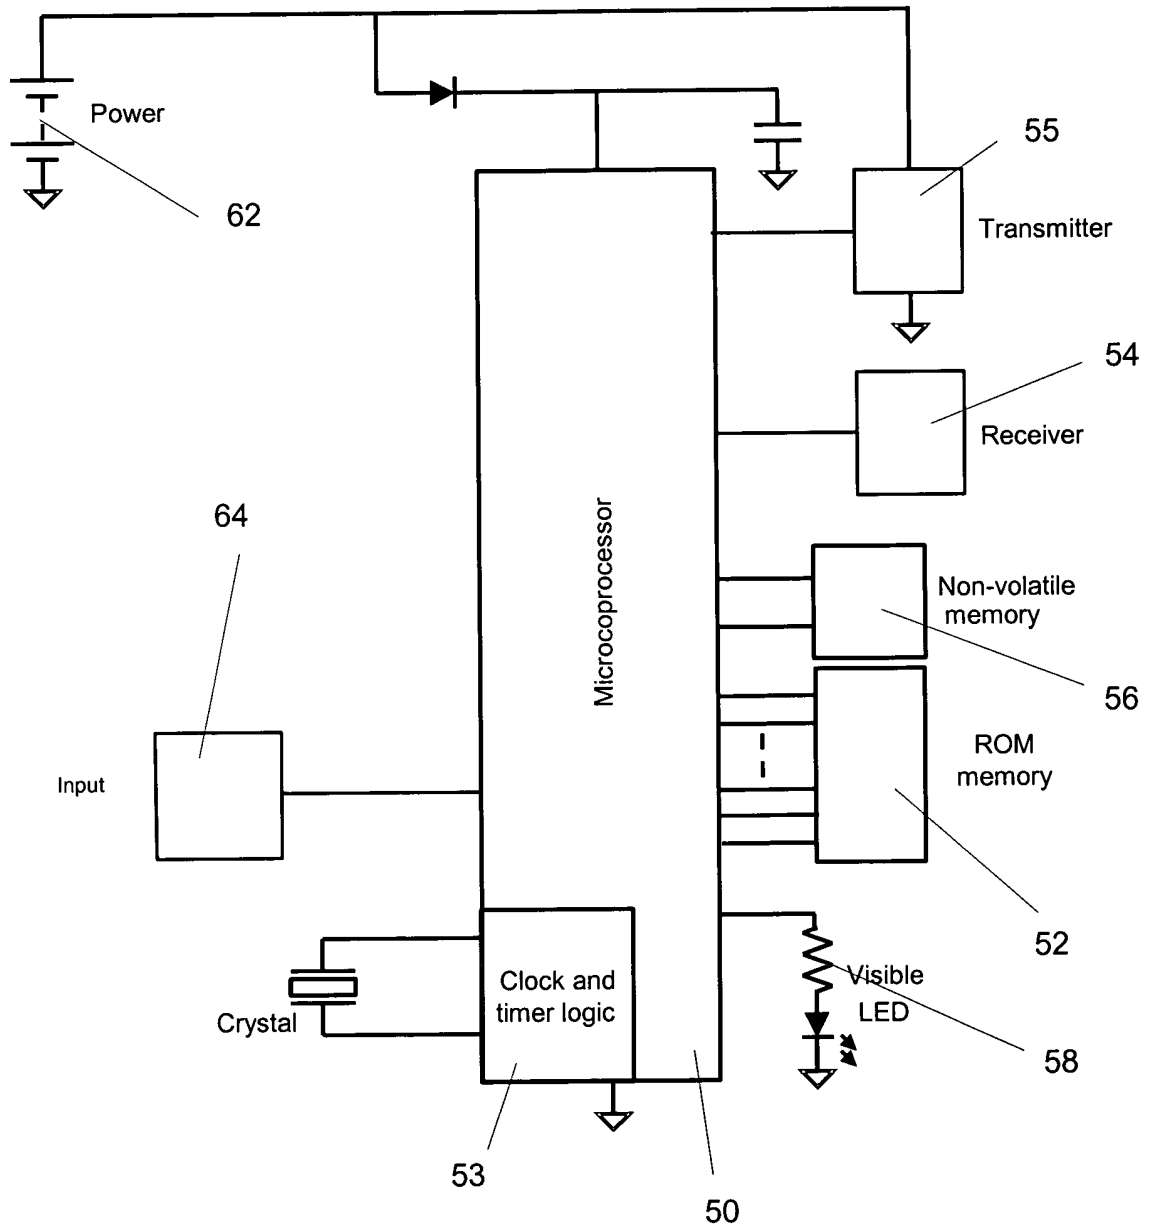


FIGURE 3

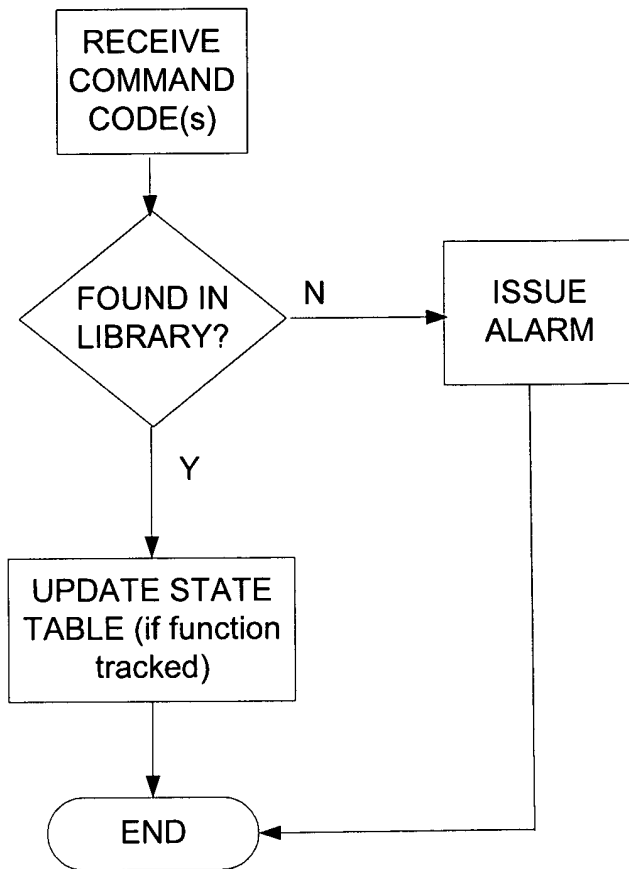


FIGURE 5

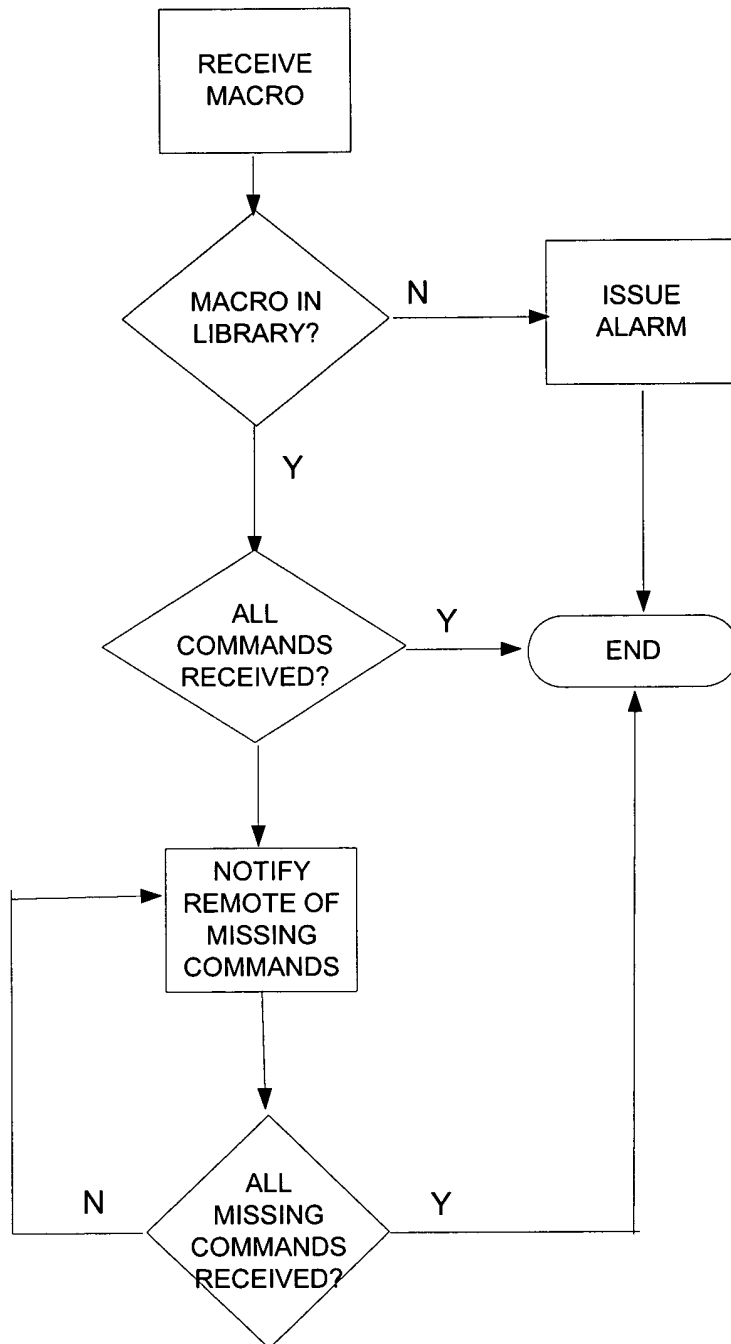


FIGURE 6

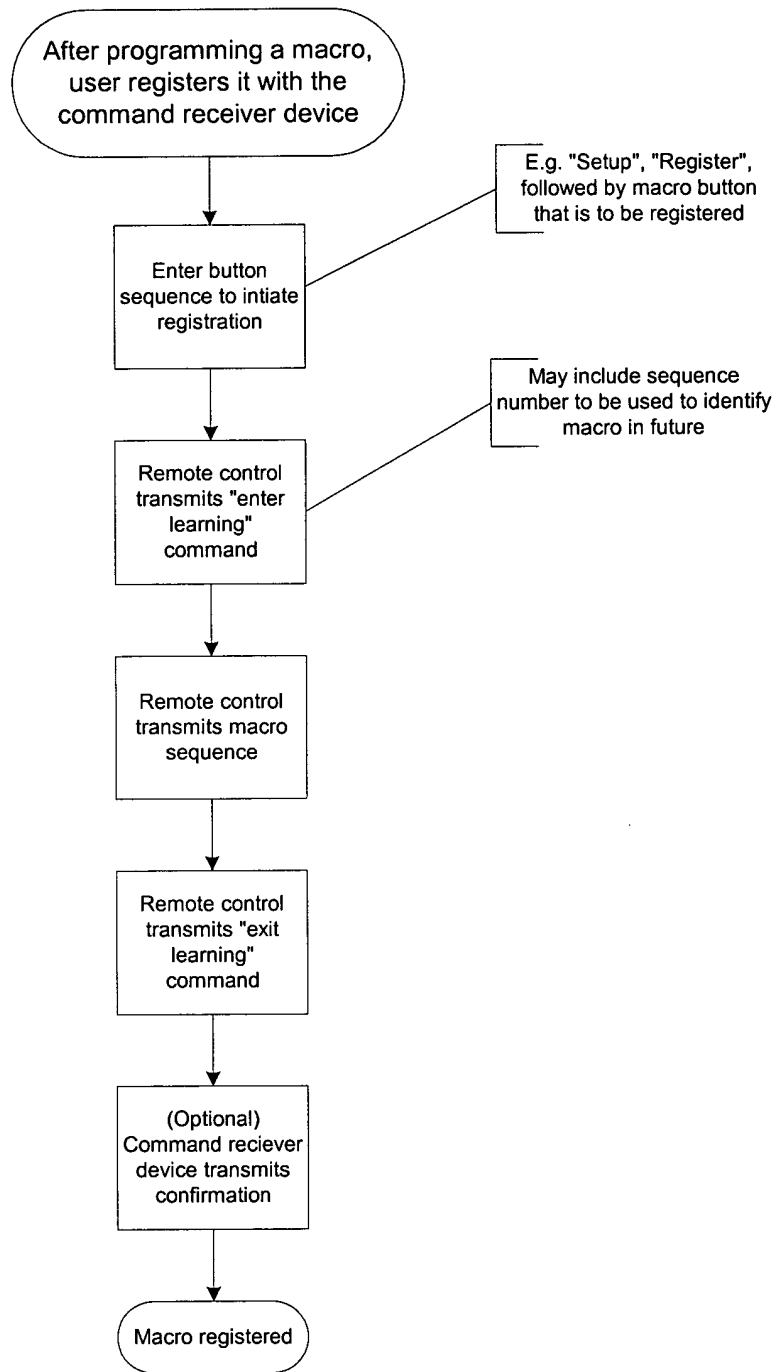


FIGURE 7

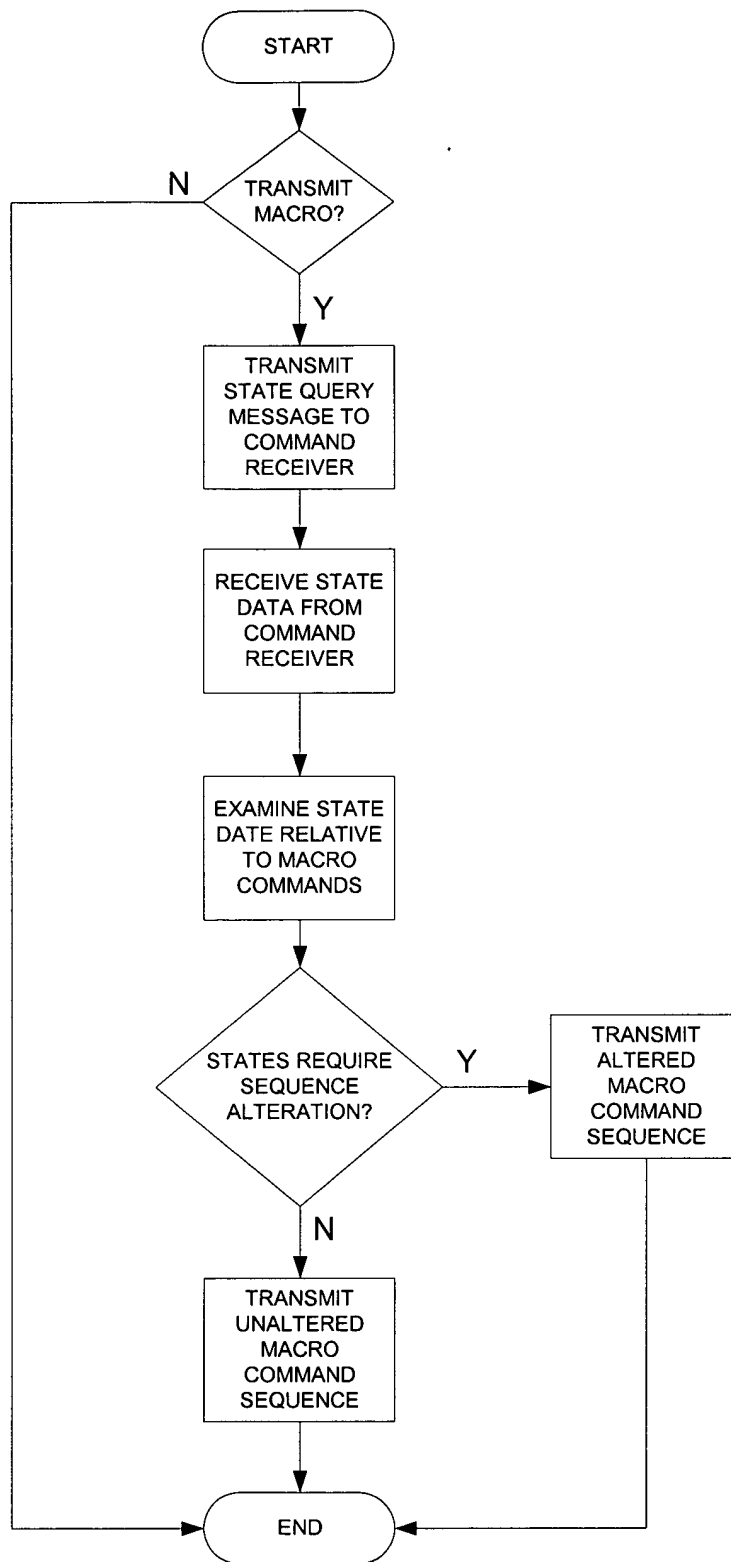


FIGURE 8

| TV device (function) | State |
|-------------------------|----------------------------------|
| power | 1 ("on") |
| volume | 6 ("volume up activated 6Xs") |
| mute | 0 ("off") |
| . | |
| . | |
| . | |

| VCR device (function) | State |
|--------------------------|------------------|
| power | 0 ("off") |
| play | 1 ("on") |
| FF | 0 ("not active") |
| . | |
| . | |
| . | |

FIGURE 4

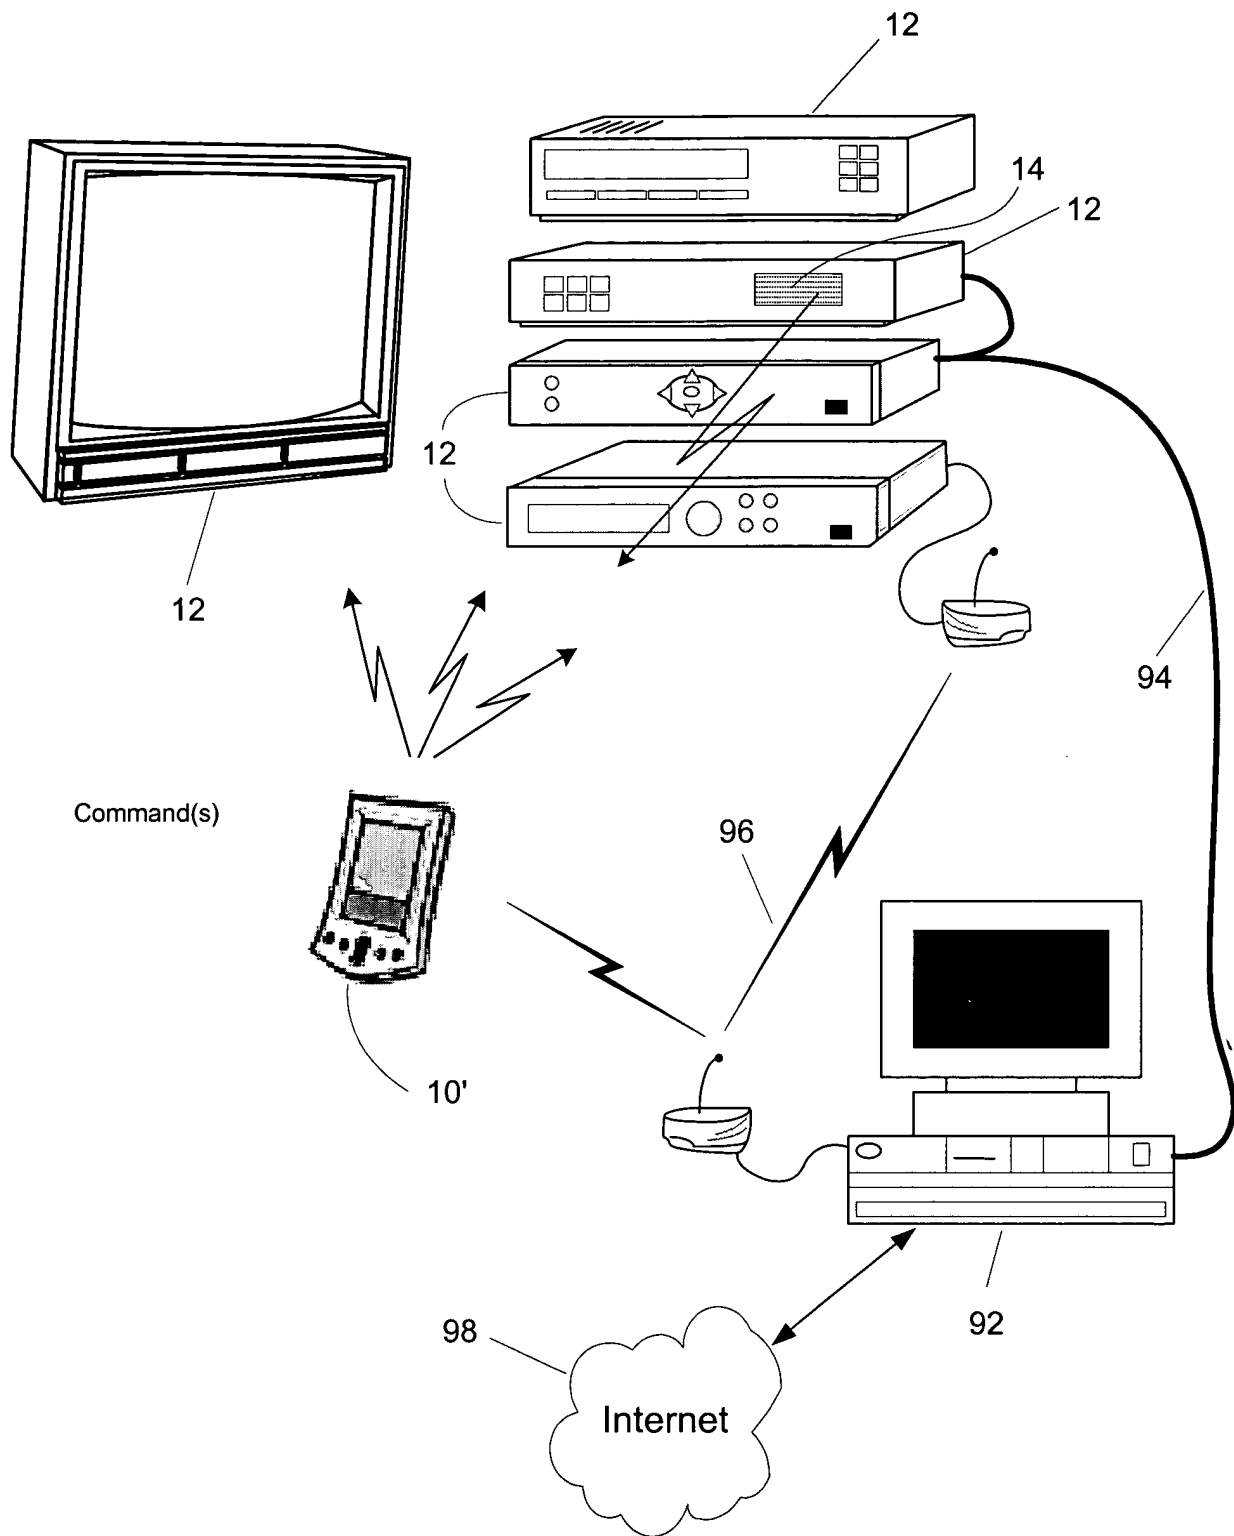


FIGURE 9